 


Nirvalux

Instruction Manual

Intelligent luxury massage chair

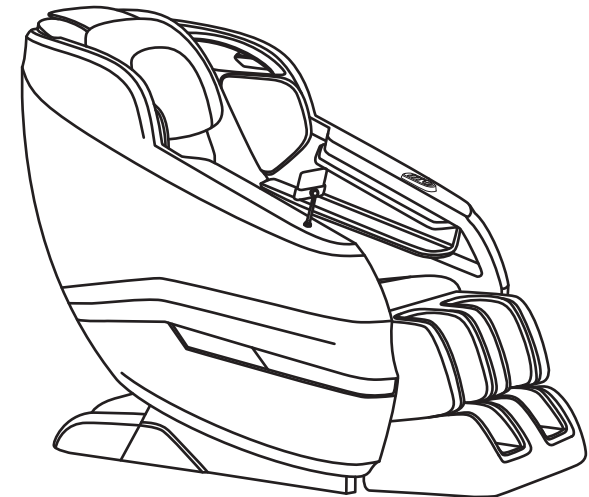

SERVE HIGH-END CUSTOMERS WORLDWIDE

12 Name and content identification table of hazardous substances in this product

Name	Harmful Materials					
	(Pb)	(Hg)	(Cd)	(Cr)	(PBB)	(PBDE)
Case	○	○	○	○	○	○
Circuit Board※	○	○	○	○	○	○
Metal	○	○	○	○	○	○
Rubber	○	○	○	○	○	○
Power Cable	×	○	○	○	○	○
Internal Signal Connection Line	○	○	○	○	○	○
Leather	○	○	○	○	○	○

This form is compiled in accordance with the provisions of SJ/T 11364

※ Circuit board components include parts made up of printed circuit board machines, such as resistors, capacitors, integrated circuits, connectors, etc.

○ Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T26572.

×

Environmental protection use period description


This electrical product is used under the conditions described in the manual, and the harmful substances or elements contained in this product will not leak out, and will not cause pollution to the environment or cause serious damage to people and property for a period of 10 years.



Our company reserves the right to improve the product and the manual. If there is any change, we will not notify you. The appearance of the product is subject to the actual product; this booklet has been carefully checked, but it does not rule out the possibility of printing errors or misunderstandings in the content. Please forgive me.

01 Preparation and instructions before use



(1) Open the packing box and take out the accessories.

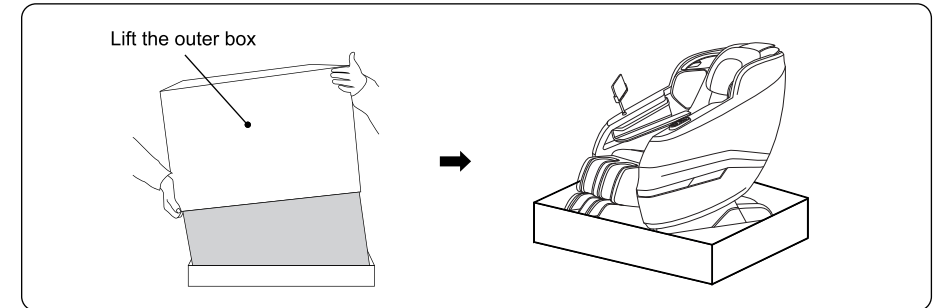



1. Remove the sealing tape of the main body of the massage chair, lift up the outer box and remove it.
2. Take out the accessories and set aside for later use.

(2) Place the massage chair

- *Lift the entire massage chair out of the floor box and place it in a suitable place in the home.
- *Do not place it in direct sunlight or where there are heating appliances, etc. Otherwise, the leather will become discolored or hardened.
- *In order to prevent damage to the floor and reduce noise, please place cloth and other things under the massage chair.
- *Please make sure that there are no obstacles in front of and behind the massage chair (more than 25cm of space should be reserved behind the chair).
- *Do not place it in a damp place or uneven place.
- *In order to prevent signal interference. Please stay away from TV, radio and other equipment more than 1 meter.

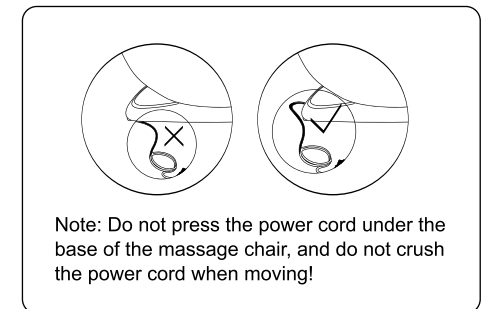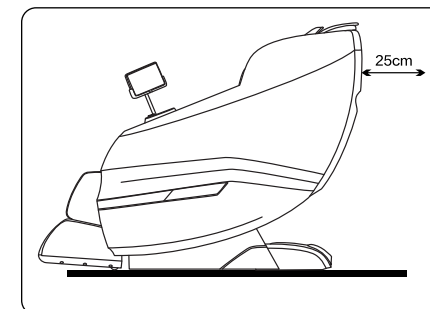

02 Product structure

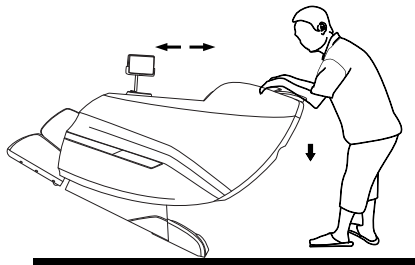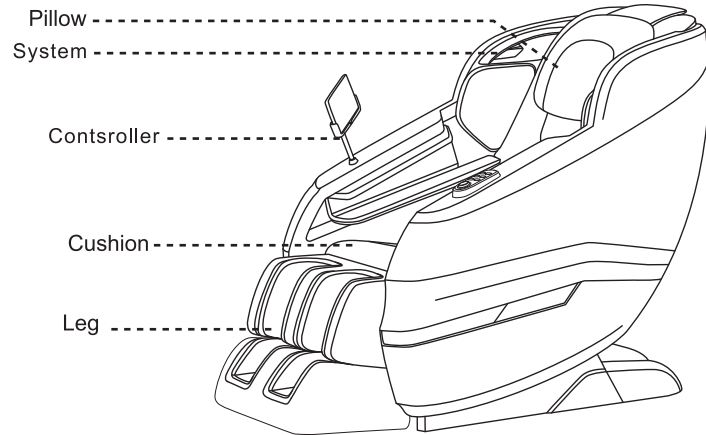

Mobile massage chair


1. As shown in the picture on the left, first press the backrest with both hands, and tilt the chair back about 30°.
2. Use the casters to carefully push the massage chair forward or backward until it is put down in a suitable position.



warning

- *When someone is lying on the massage chair, do not move the massage chair.
- *In order to avoid falling, please firmly support the massage chair when moving it.
- *To avoid falling off, hold the massage chair firmly while moving it.
- * When moving the massage chair, the lower leg must be fully retracted, otherwise it may lead to injury.

11 product maintenance

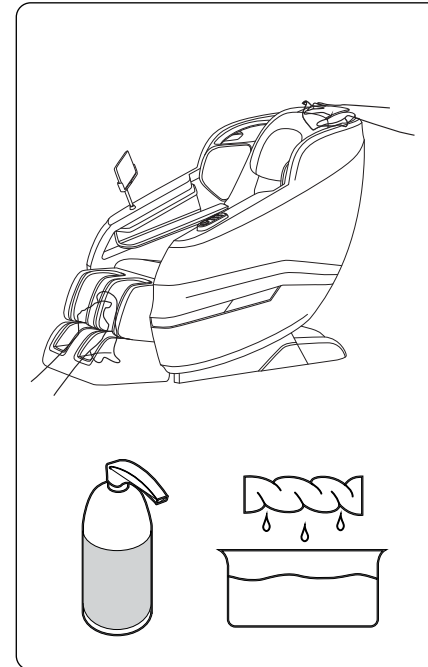

clean

Do not use steel wool, abrasive cleaners or corrosive liquids (such as gasoline or acetone) to clean the product.


- ❶ Unplug the plug from the power socket.
- ❷ Clean the massage chair, remote control and power cord with a dry cloth.
- ❸ Do not use a damp cloth or detergent.

Store

- ❶ Unplug the plug from the power socket.
- ❷ Store this product in a cool and dry place away from sunlight.
- ❸ Do not place heavy objects on the product.

If the leather case is damaged or mechanical failure, please stop using this product and inquire from the authorized after-sales service center or customer service center in your country (region).

If you do not use it for a long time, please unplug the power cord!

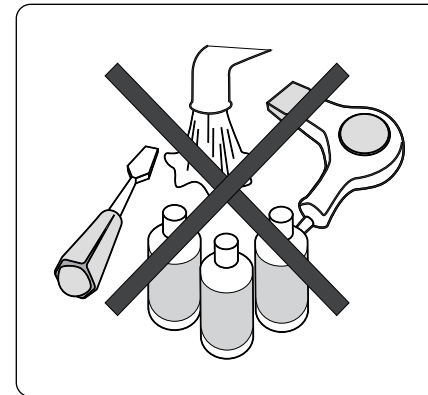

03 Product Structure



warning

- Those who are not allowed to use this product: those who are physically, emotionally, or mentally defective, or who lack experience and knowledge. Unless they are supervised or instructed by the person responsible for their safety regarding the use of the product.
- Children should be supervised to ensure that they do not play with the massage chair.
- If the power cord is damaged, it must be replaced with a special cord or a special component purchased from its manufacturer or maintenance department.
- The surface of the appliance heats up, so people who are not sensitive to heat must pay attention to it.
- Do not use this machine under a voltage that does not meet the standards of this machine.
- This product must use a grounded three-core power socket, and there should be a reliable and good grounding device.
- Damaged leather or cloth covers should be replaced in time. Do not use this machine to avoid personal injury.
- Do not allow water or moisture to enter the hand controller to avoid control failure.



10 Abnormalities and handling methods

Possible situation	Approach
The sound made during operation	The sound produced by the structural design will not affect the machine.
The power is plugged in, but the massage chair cannot be operated.	<p>Check if the power head is plugged in or is powered on.</p> <p>Check whether the power switch of the massage chair is in the "I" position.</p> <p>Check whether the power cord is damaged.</p> <p>Check that the fuse is damaged and replace the fuse.</p> <p>Check whether the manual control line is inserted well and screwed</p>
The backrest cannot be raised and lowered freely.	<p>Check whether there are foreign objects stuck in the backrest and lower legs.</p> <p>Check whether the connecting wire is loose.</p>
During use, the controller can be operated, but the massage chair cannot be operated.	After a long period of operation, if the temperature of the machine is too high, the massage chair will be automatically in the temperature protection state, please turn off the power and use it for 30 to 50 minutes to let the internal heat dissipation of the machine.
During use, the controller cannot be operated, and the massage chair also stops operating	After the automatic timing function is activated. If the set time is up, please press the button again to control it.

If an abnormal situation occurs, in order to prevent accidents, please stop using it and unplug the power cord.

If the following solutions are still invalid, please contact the after-sales service center.

The back of the massage chair body

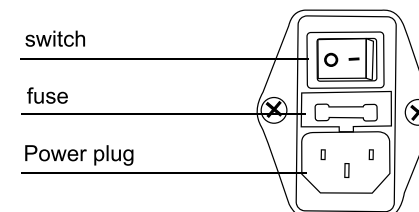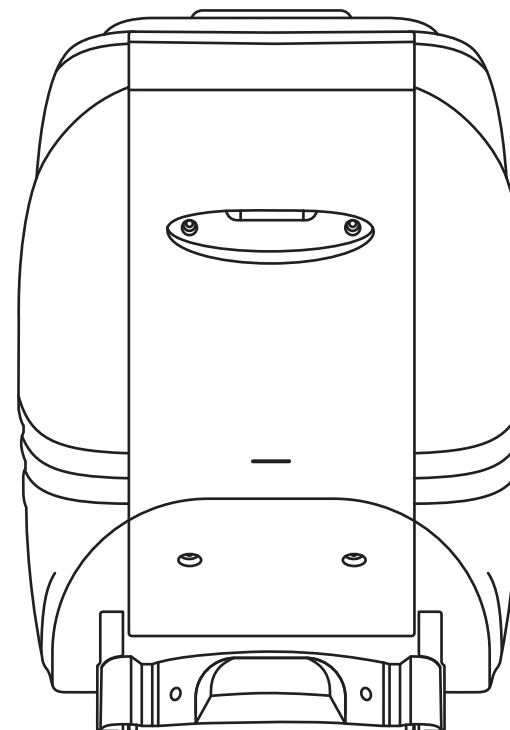


04 Controller description

Manual Controller function partition: (Manual Controller Front)



Handrail Quick Operation

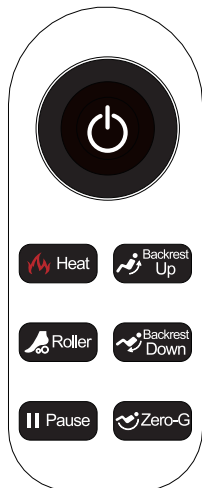

Long press to switch ON/OFF
Short press to switch automatic program



Press and hold this button to raise the backrest,
release the button to stop the backrest from rising.



Press and hold this button to lower the backrest,
release this button to stop lowering the backrest.



Zero gravity selector button, zero gravity off,
zero gravity 1 speed, zero gravity 2 speed.



Heat on/off button.



Calf Foot Roller Switch.



Massage pause switch key.

09 Safety Precautions



warning

Please read all instructions before use

This massage chair must use a socket that matches the plug. Incorrect grounding can cause electric shock. Please do not modify the plugs and sockets without authorization, and be sure to entrust professional technicians to inspect them. When using electrical products, in order to check the risk of electric shock, burns, fire, or personal injury, basic safety precautions should be followed, including the following:

- Be sure to use an outlet that matches the plug.
- Make sure that the plug is fully inserted into the socket to reduce the risk of short circuit or fire.
- After use or before cleaning, be sure to unplug the plug in time.
- Do not use this product at high temperatures.
- Do not store or use this product outdoors or in direct sunlight.
- If there is a sudden power failure during use, please set the switch to the "0" position immediately, and unplug the plug to avoid damage to the product when a call comes in.
- Do not operate the massage chair if the cord is wet or damaged.
- Do not insert or unplug the plug with wet hands to avoid accidents.
- When a child, handicapped, or handicapped person is near or using a massage chair, someone must be present to look after him.
- Only use this product for the purposes described in this manual.
- Do not stand, sit or jump on the calf rest. So as not to cause damage.
- Please do not try to sit on the armrest or backrest, so as not to tip the massage chair over and cause an accident.
- Do not go to sleep during the massage.
- Please keep the massage chair clean and avoid inserting other objects into the gaps of the massage chair
- Do not move the massage chair directly by pulling the power cord.
- Before each use, check whether there are abnormal cracks in the flannelette of the backrest of the massage chair.
- This product is designed for home use only.
- When you are not sure whether you can use the massage chair, please consult your doctor.
- In order to avoid discomfort or injury caused by using this massage chair, the following people should consult a physician before using this product; Those receiving treatment, those with back disease, those with abnormal or distorted cervical spine.
- If you feel pain during use, please stop using it immediately. If it is damaged during use, please seek medical attention immediately.
- Do not massage red, swollen or inflamed skin.
- This product only provides comfortable massage enjoyment for the family. It is not a professional massage medical device, so it cannot replace professional treatment.
- It is recommended to use the massage chair for 30 minutes a day, and massage the same part should not exceed 15 minutes, otherwise excessive massage will result in counterproductive effects, and long-term use will cause the massage chair to overheat and shorten the service life of the product.
- Do not use this product in an environment where gas or oxygen is injected.
- This product is not suitable for children under 12 years of age.


08 Product technical parameters

Item Name	Specification description
Product Name	Intelligent luxury massage chair
Model	NIRVALUX MASSAGE CHAIR
Rated Voltage	220-240V~
Rated Frequency	50-60Hz
Rated Power	75W
Packing Size	1180mm (Length) x750mm (Width) x1140mm (Height)
Weight	Net weight: 61kg Gross weight: 73 kg
Origin	China
Safety Design	Class I
The default orking time	20minutes

05 Operating instructions


1. display screen :


Color LCD display shows the massage function in the operated state.

2.  Power switch to turn on and off the massage chair

3. **Auto :** 16 kinds of automatic programs can be selected , click on the corresponding program to start the massage.


4. Backrest :


- (01)  Press and hold this button continuously to make the backrest move upward and stop moving when stop pressing.


- (02)  Press and hold this button continuously to make the backrest move downward and stop moving when stop pressing.


5. Mechanism :


- (01)  Press this button continuously to make the mechanism move upward.

- (02)  Press this button continuously to make the mechanism move downward.







6.  Manual massage kneading mode key

7.  In manual mode, press the buttons to adjust the strength of the massage weak, medium and strong.

8.  Massage parts selection key, manual mode, select the fixed point, local, full massage

9.  Press this button for Pause of massage

06 Operating Instructions


10.  Airbags Cycle switching, upper body air pressure massage, lower body air pressure massage, whole body air pressure massage, air pressure massage off, boot default whole body air pressure massage
11.  Intensity Press the button to adjust the air pressure strength cyclically, first, second and third gears, the default airbag strength of three gears on the power-on
12.  ZERO ZERO-G Zero gravity on/off button, first, second, off
13.  Heat Turn on/ Turn off heating function
14.  Foot Roller Foot roller on/off button
15.  Time/ Child-Lock Press this button to adjust massage time from 10 minutes, 15 minutes, 20 minutes, 25 minutes and 30 minutes. The default one is 20 minutes. Long press this button to turn on and off the child lock



warning

- * When the leg kneading assembly is raised, please do not sit in the massage chair. The pressure was tested on the kneading leg assembly in an instant, resulting in damage to the machine.
- * There is also an accident caused by the chair overturning and causing injury.
- * Before sitting in the massage chair, please make sure that the back of the chair is upright, and then adjust the reclining angle according to your preferences.
- * Do not put your hands or foreign objects in the gap between the seat and the back of the chair, or between the seat and the leg-kneading assembly to prevent accidental injuries.
- * When adjusting the angle, please make sure that there are no obstacles and small animals behind the back of the chair or under and in front of the kneading leg assembly.

07 Operating Instructions

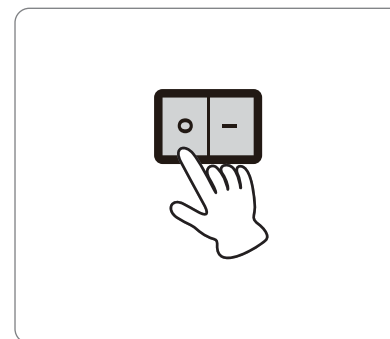

▼
The switch is on the back cover of the electric control box

- 1 * Press the power button of the hand control on the armrest of the massage chair to stop all actions.
- 2 * If it is not used for a long time, please be sure to turn the power of the massage chair to the "O" position to extend the service life of the massage chair.
- 3 * Unplug the power plug.
* Do not twist or twist the power cord to prevent the power cord from breaking.

How to use Bluetooth

- * The Bluetooth is turned on by default when it is turned on, and the Bluetooth name is: Q22 ;
- * When the mobile phone's Bluetooth is turned on, find the corresponding Bluetooth connection to play music.