


SERENITY X – Massage Chair

USER MANUAL

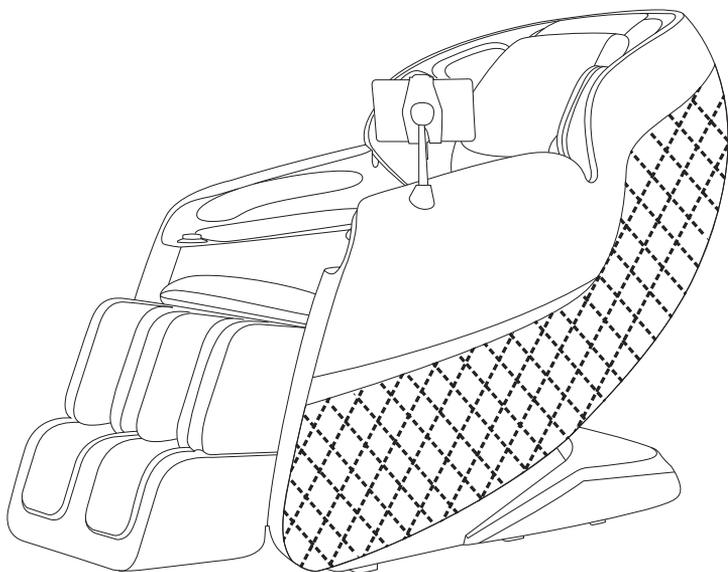

BL-SL150A

TABLE OF CONTENTS

- Thanks for your purchasing. Before using, please read this USER MANUAL carefully, and pay special attention to the safety precaution to ensure proper operation and use.
- Please keep this USER MANUAL in a safe place for further reference.

1. SAFETY PRECAUTIONS	1.1 MEDICAL WARNINGS	01
	1.2 WARNING	02
	1.3 FORBIDDEN	02 - 03
	1.4 REMOVE PLUG	03
2. NAME AND FUNCTION OF EACH COMPONENT	2.1 EXTERNAL STRUCTURE	04
	2.2 INTERNAL STRUCTURE	05
	2.3 REMOTE CONTROLLER INSTRUCTION	06
	2.4 REMOTE CONTROLLER KEY FUNCTIONS	06
	2.5 AUTO MODE	09
	2.6 CUSTOM MESSAGE MODE	10
3. INSTALLATION PROCESS	3.1 INSTALLATION METHOD	11
	3.2 CALF INSTALLATION PROCESS	12
	3.3 REMOTE CONTROL BRACKET INSTALLATION PROCESS	13
	3.4 MOVE METHOD	14
4. PRODUCT STORAGE AND MAINTENANCE	4.1 INSTALLATION POSITION	15
	4.2 GROUNDING INSTRUCTIONS	16
	4.3 AFTER USING THE CHAIR	16
	4.4 METHODS OF STORAGE	16
	4.5 MAINTENANCE	16
5. TROUBLESHOOTING GUIDE	5.1 KIND REMINDING	17
	5.2 TROUBLE AND SOLUTION	17
	5.3 TECHNICAL SPECIFICATIONS	18

1. SAFETY PRECAUTIONS

- Please read "SAFETY PRECAUTIONS" carefully to ensure proper operation before using.
- The following "SAFETY PRECAUTIONS" will help you to correct use of this massage chair correctly.
- To clearly indicate the degrees of danger and damage, the accidents caused by incorrect use are classified into "WARNING" and "FORBIDDEN". Instructions marked as follows should be strictly followed.

1.1 MEDICAL WARNINGS

NOT RECOMMENDED FOR THE FOLLOWING PEOPLE.

- Patients with serious hyperostosis
- Swollen lump and patient thrombosis
- Patients with serious heart conditions
- Pregnant Women
- People that consume large amounts of alcohol
- People with diabetes
- People suffering from high fever
- Patients with malignant tumors or malignant abscesses
- People with distorted joints
- People with serious skin conditions
- People with spinal injuries
- All people should consult a physician and exercise care when operating this system
- Minors under 16 years or people unable to control their behavior, such as mental patients, people with paralysis, etc.

1.2 WARNINGS

- Use this appliance only for its intended use as described in this manual.
Do not use attachments not recommended by the manufacturer.
- Never operate this chair if it has a damaged cord or plug.
- Keep the cord away from heated surfaces.
- Please empty pockets and remove all your arm Jewellery and watch before using this chair.
- Do not operate where aerosol (spray) products are being used.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- Do not remove the back cushion to modify roller mechanism.
- Do not remove the bottom seat to modify actuators.
- Keep the cord out of a heavy traffic area.
- Please unplug the power cord from the electrical outlet Immediately after use.
- Only people less than 120kgs are acceptable.
- Do not operate any equipment with damaged parts.
- Any other use not recommended by the manufacturer may cause electrical shock or injury.
- Do not touch or re-wire the wires connected to the master-box.
- Do not attempt to repair or modify any electrical or mechanical functions on this unit, it will void the warranty.
- Do not put your hands or head under the chair
- When using the massage chair, ascertain that the footrest is in the lowest position.

1.3 FORBIDDEN

- Do not allow children to play near the chair, especially in case of using the chair.
- Do not leave mobility impaired or speech impaired people alone in chair.
- Do not place or stock this chair near damp places such as swimming pools or bathrooms
- Do not presses massage rollers by force.
- Do not stand on the chair or put heavy items on the chair.
- Do not use in an environment that is dusty, greasy, or lack of oxygen.

- Do not place near steam oven, open fire, or heat.
- Wear suitable clothing, do not massage with bare skin .
- Do not place it directly in the sun.
- Do not use electric blanket while using the massage chair.
- Do not use it outdoors.
- Do not massage while smoking.
- Do not massage immediately after meals.
- Do not sit on the back cushions, armrest, or legs rest.
- Don't use it when your body is wet or moist as it can result in electrical shock.
- Do not massage with more than one person.
- Don't massage when using head ornamentation as it can result in injury.
- Do not stumble over electrical wires or connections.

1.4 REMOVE PLUG



- Please pull out the power plug before maintenance. In addition, please do not insert or unplug the power plug with damp hands, to avoid electric shock.
- When the massage chair is not in use, please switch off power and remove the plug from the socket.
When there was a sudden power outage please cut off power supply immediately and pull out the power plug.

BE CAREFUL

- Please avoid Massaging after drinking or when you are not feeling well.
- Do not massage the head, elbow joints, knees, chest, abdomen, etc. directly on the massage ball.
- Do not damage the power cord; this may result in electric shock or mechanical failure. Please contact the service center for a detailed inspection.


2.NAME AND FUNCTION OF EACH COMPONENT

2.1 EXTERNAL STRUCTURE

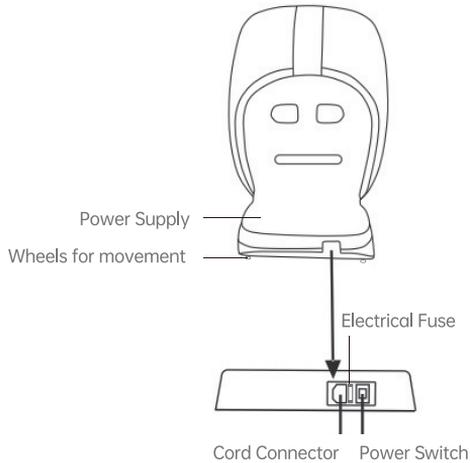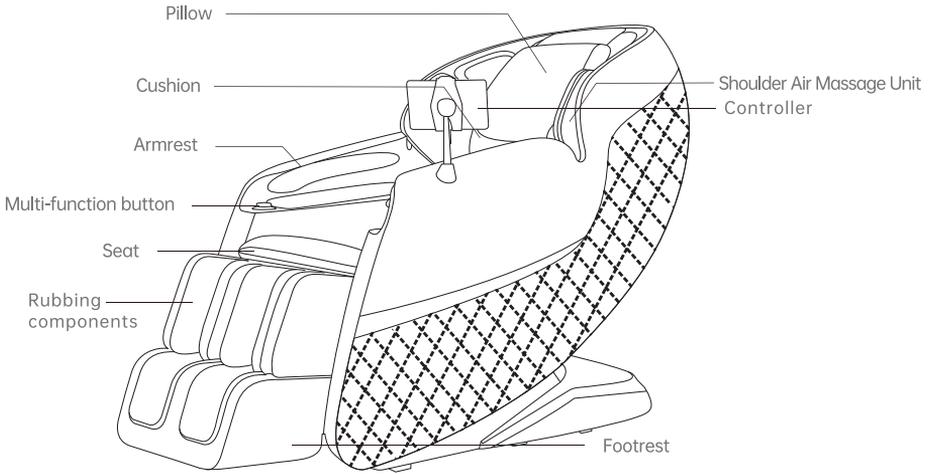


2.2 INTERNAL STRUCTURE

- 1 Shoulder Air Massage Unit
- 2 Remote Control
- 3 Armrest Air Massage Unit
- 4 Calf Air Massage Unit
- 5 Foot Air Massage Unit
- 6 SL Massage Track
- 7 Back Heat
- 8 Slide Rail
- 9 Foot Roller Massage Unit

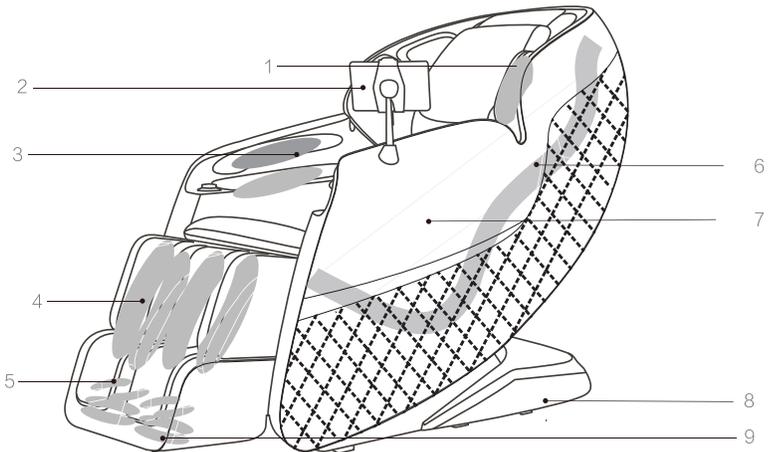

2.3 REMOTE CONTROLLER INSTRUCTION

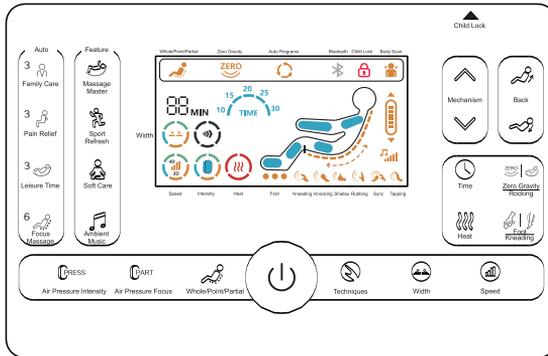

2.4 REMOTE CONTROLLER KEY FUNCTIONS



Child Lock

When the power is turned on, the child lock button is turned on by default, and the buttons on the hand controller cannot be operated. Long press the child lock button for 3 seconds to unlock, operate the hand controller button, and long press this button again to lock the hand controller button function. The corresponding icon display on the screen.

Feature



Massage Master

The massage intensity ranges from light to heavy, and the whole body can be relaxed and massaged step by step, which can effectively relieve the muscle soreness of the body. Using this mode can effectively promote the body's recovery from fatigue, ingeniously create exclusive massage techniques, which can effectively relieve various discomforts such as sedentary neck and shoulder pain, back pain, etc.



Sports Refresh

Massage the whole body with moderate intensity, which can make the muscles and bones of the body more and more stretched and the body more flexible. The sports massage program is specially designed for the muscles of the whole body after physical activity and exercise. It relieves and relaxes the muscles after exercise, and gradually relaxes the whole body. This program effectively relieves muscle soreness after exercise, neck, shoulders, back, waist, and other general discomfort. Meanwhile, it can make the muscles and bones more and more stretched, and speed up the muscle recovery after exercise.



Soft Care

The massage force gently caresses the whole body, combined with rhythmic rocking movements, it can effectively relax the body and mind. Massage techniques that promote blood circulation and relax the body and mind can effectively relieve various discomforts caused by long-term sleep deprivation, such as general discomfort, listlessness, slow response, headache, and poor memory.



Ambient Music

In the automatic program, press this key to play music. Short press: Volume 1 - Volume 2 - Volume 3 - off.

Auto



Family Care

Create a personalized exclusive program for ladies who love beauty, so that you can enjoy the SPA massage experience without leaving home. It is your personal masseuse at home. This mode has three automatic modes, and each press switches between one mode and cycles in sequence.



Pain Relief

Mainly for the neck and shoulders, combined with massage techniques such as kneading, pressing, and neck lifting, it can relieve shoulder and neck fatigue. This mode has three automatic modes, and each press switches between one mode and cycles in sequence.



Leisure Time

A massage mode suitable for game leisure time, relieving the sense of urgency and muscle tension during focused game play. This mode has three automatic modes, and each press switches between one mode and cycles in sequence.



Focus Massage

Neck focus, shoulder decompression, back relief, waist care, hip stretch, leg relaxation, icon flashing prompts.

Neck Focus: Massage for the neck, relieve muscle tension and soreness in the neck, and improve blood circulation in the brain.

Shoulder Decompression: Massage for the shoulders relieves muscle tension and soreness in the shoulders and is good for blood circulation in the shoulders.

Back Relief: Massage from the shoulder blades to the waist, relieve muscle tension and soreness in the middle and back of the shoulders, and benefit the health of the spleen and stomach.

Waist Care: Massage for the waist, relieve the muscle tension and soreness of the waist, and help to accelerate the elimination of metabolites.

Hip Stretch: The massage for the buttocks relieves muscle tension and soreness in the waist and buttocks, helps to expel toxins from the body and shape the body.

Leg Relaxation: Massage for the buttocks and legs, relieve muscle tension and soreness in the buttocks and legs, and help blood circulation in the legs.

Other Programs



Turn On/Off

Turn on/off the machine massage function, In the state of power on, press this key to open the main page of the function menu, and the LCD screen lights up.

Boot default: Massage Master program, tap the power button to switch on/off the machine.

Automatic detection: automatic shoulder detection when the massage chair is turned on, the corresponding icon lights up, and the running position of the movement flashes.

Manual adjustment: The running position of the movement flashes, and the icon for manually adjusting the shoulder position on the left side of the screen lights up. Press and hold the movement up and down key to adjust the position of the movement, and the corresponding icon lights up, tap this button again to turn off the function.

The default working time of the massage chair is 20 minutes.



Air Pressure Intensity

Press this button to adjust the strength of the airbag, the icon on the screen is on, and there are five levels of intensity to choose from, in order: first level - second level - third level - fourth level - fifth level, the corresponding level icon is on or off, and the massage intensity is switched cyclically.



Air Pressure Focus

Press this button to select airbag massage: whole body airbag, upper body airbag, lower body airbag, airbag massage off, cycle switching massage intensity, corresponding part icon is on or off. In the closed state, the airbag massage function can be directly activated by pressing the airbag force.



Whole / Point / Partial

After entering the manual mode, press this key to enter in sequence: full range- partial-fixed point state massage.

Whole course: the movement moves throughout the whole course and the icons flash in turn to prompt.

Fixed point: The movement is fixed-point and the icon flashes to prompt, and the position can be adjusted by the movement key.

Partial: the movement moves in partial area and the icon flashes to prompt, and the position can be adjusted by the movement key.



Techniques

After entering the manual mode, a variety of massage techniques: kneading, knocking, shiatsu, kneading & knocking kneading&rubbing, Tapping, cycle in turn, the corresponding icon in the massage state, so that you can enjoy the service of the masseur.



Massage Width

After the movement enters the manual mode, you can press this button to switch the massage width, in order: wide-narrow-medium, the corresponding gear icon lights up, and the massage width is switched cyclically. Note that the massage range cannot be switched during kneading, kneading& knocking, leading&rubbing massage techniques.



Massage Speed

After entering the manual mode, press this button to switch the massage speed of the movement, in order: first gear to fifth gear, the corresponding gear icon lights up, and the massage speed is switched cyclically.



Timer

Press this button to adjust the massage time, Press once to adjust for 5 minutes, up to 30 minutes, Press it again to enter the massage state for 10 minutes.

Press this button and hold 3 seconds to switch on/off the bluetooth.



Zero Gravity/Rocking

Press this button to turn on the zero-gravity first gear-second gear-turn off the zero gravity, cycle switching, the massage chair opens a completely relaxed massage posture, enters the space capsule dumping state.

Press and hold for more than 3 seconds to turn on or off the rocking function.



Heat

Press this button to turn on the heating state, and the corresponding icon on the LCD screen lights up; press it again to turn off the function, and the icon goes out. The sequence is: first gear - second gear - third gear - off.



Foot/Kneading

Long press this button: first gear - second gear - third gear - off.

Press and hold for more than 3 seconds to turn on or off the leg massage function.



Mechanism

Press and hold the up and down keys to control the movement up and down, and the corresponding icon lights up, When the automatic program is checking the status of shoulder, manually adjusting the shoulder position, this button can be used to adjust the shoulder massage position.



Back Up

Long press this button, the backrest is in a rising state, when it rises to a satisfactory position, release the button, and stop rising.




Back Down

Long press this button, the backrest is in a downward state, when it falls to a satisfactory position, release the button, and stop rising.

Knobing Controller

Long press for 3 seconds to turn on or off the massage chair; Click to switch to automatic program; Rotate to control the backrest to rise or fall.

2.5 AUTO MODE

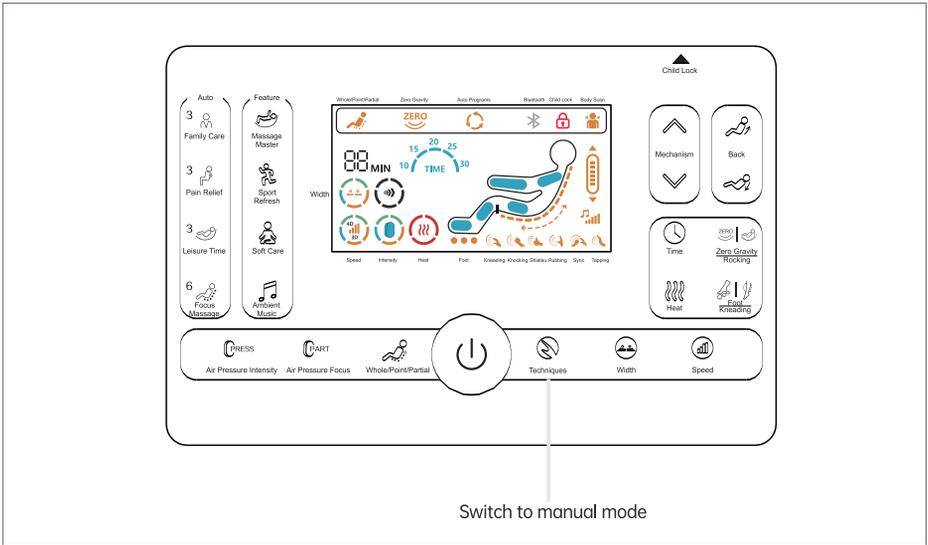

Select Auto massage mode


1. when the massage chair is turned on it will automatically start to massage in automatic modes, and speed cannot be adjusted, if you would like to adjust speed please switch to manual mode.

2. 12 Automatic Modes:

- Family Care +3
- Massage Master
- Pain Relief +3
- Sports Refresh
- Leisure Time +3
- Soft Care
- Focus Massage +6

Auto massage mode will stop automatically after 20 minutes.

- You can switch to the next auto program anytime, and don't have to wait until the current program finishes.
- In auto mode, you still can turn on/off air pressure system, heater, foot rollers.

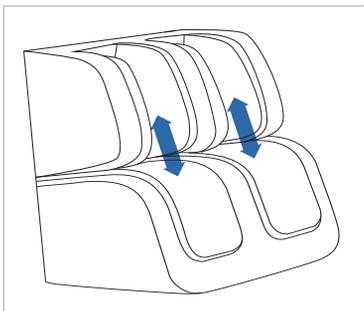

Calf extension settings

- The footrest unit can be manually extended to suit taller individuals.

< Settings	Bluetooth
Bluetooth <input checked="" type="checkbox"/>	
This iPhone is discoverable as "iPhone" while Bluetooth Settings is open.	
MY DEVICES	
BK8000L	Not Connected ⓘ
BL-SL150A	Connected ⓘ
WEN-C150	Not Connected ⓘ

Bluetooth Connection

- Power on the Massage Chair.
Search Name: BL-SL150A
No Password.

2.6 CUSTOM MESSAGE MODE


- You can use various manual modes through the manual key.
- You can also adjust the strength of the air bags and intensity of the rollers.
- In the automatic mode, it is normal that some manual keys cannot be operated. It can be used normally after switching to the manual mode.
- When the chair is powered on and whether the manual control is turned on or not, you can still adjust the angle of the chair by pressing the back up button or back down button on the manual control to have a rest.
- When the chair is powered on and whether the manual control is turned on or not, you can still adjust the angle of the chair by rotating the multifunction button to have a rest and you can use the USB charging port to charge electronic devices.
- In the manual mode, you can use the fixed key to massage at a fixed point.
- In order not to disturb the rest of customers, the massage chair will not reset after the end of each work time. You need to manually press the power button to reset.

When the massage time is finished the unit will return to upright position and shut down automatically.


3. INSTALLATION PROCESS

3.1 INSTALLATION METHOD


ACCESSORY KIT (PACKED IN A SMALL BAG) SEE PICTURE 2

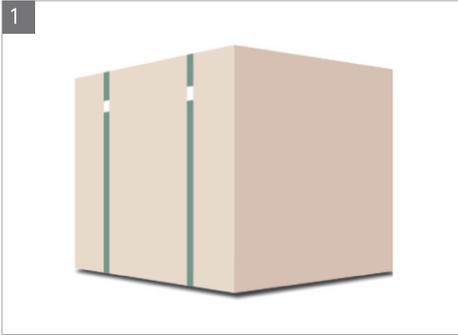

Our chair is shipped in one box



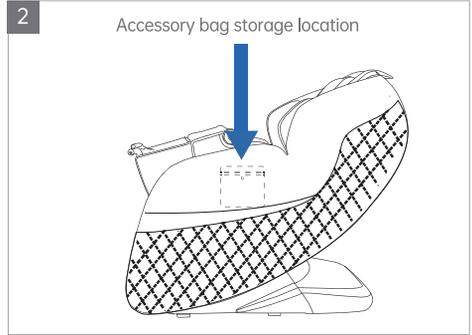


Take out the accessory bag

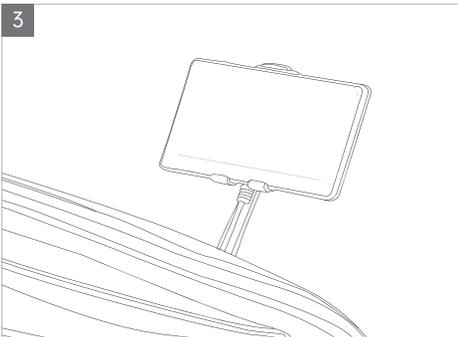


Remote control Pad


Steps of remove the box:

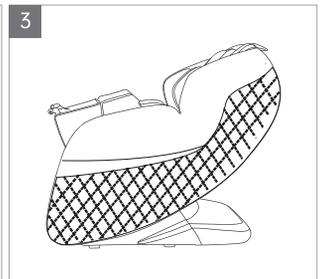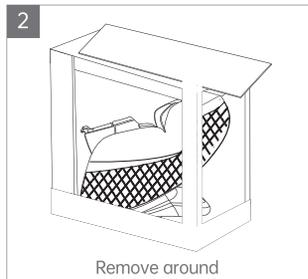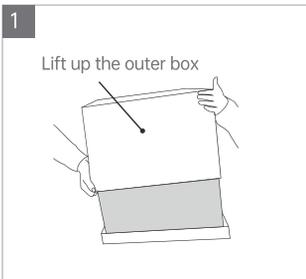

3.2 CALF INSTALLATION PROCESS

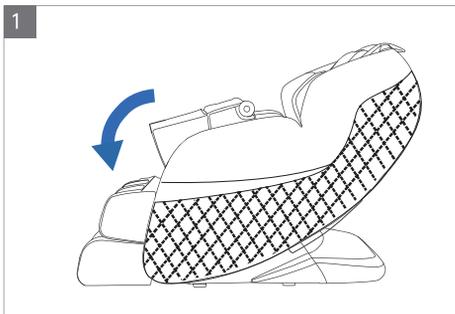


Remove the calf and place it on the floor

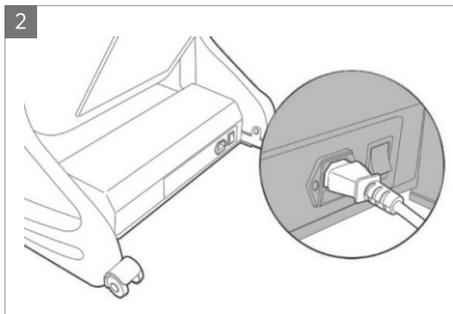


Connect the power and turn on the power switch to reset the chair

3.3 REMOTE CONTROL BRACKET INSTALLATION PROCESS

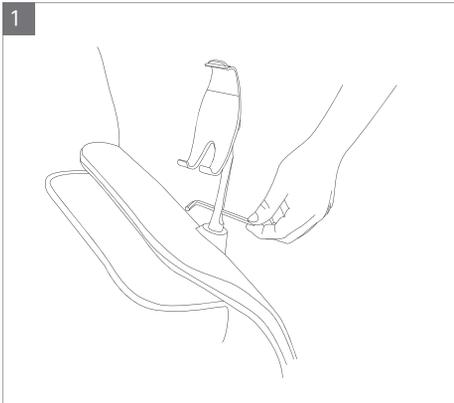


Use an Allen key to tighten the remote control bracket

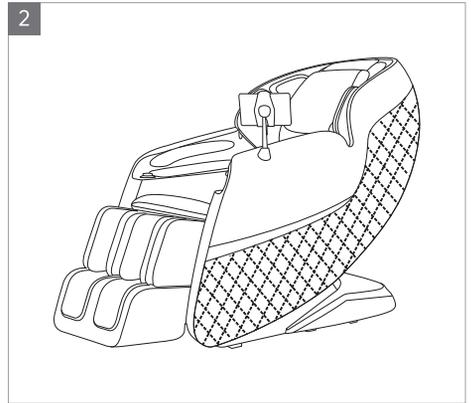

Put the remote control into the bracket

3.4 MOVE METHOD

- There are moving rollers at the bottom of the chair.
- Raise the back to the highest point.
- Switch off and unplug the chair.
- Lift the front part of the chair as shown in the figure (one person raises the front part via holding a moving holder, another person pushes the chair when holding the top of the chair), make wheels move.

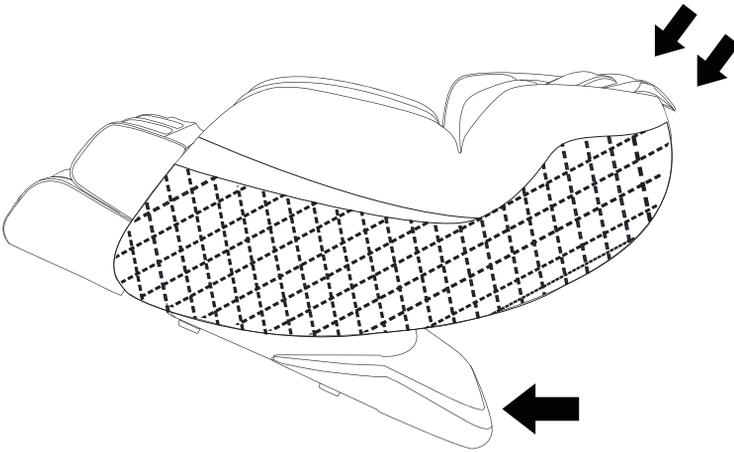

CAUTION


- Don't move it when there are people in it.
- Don't use the armrest while moving the chair, only hold the moving holder in the back and front.

4.PRODUCT STORAGE AND MAINTENANCE

4.1 INSTALLATION POSITION

PLEASE LEAVE THE SPACE AROUND THE MESSAGE CHAIR WHEN PREPARING THE MESSAGE

- (1) Place a massage chair where there is enough space for the back of the chair to recline and the footrest to rise.
- (2) Make sure that there is at least 11.8 inch in the back of the massage chair and at least 19.68 inch in front of the massage chair. In order to prevent from signal interference, please keep at least 1m away from the TV, radio and other video and audio devices.

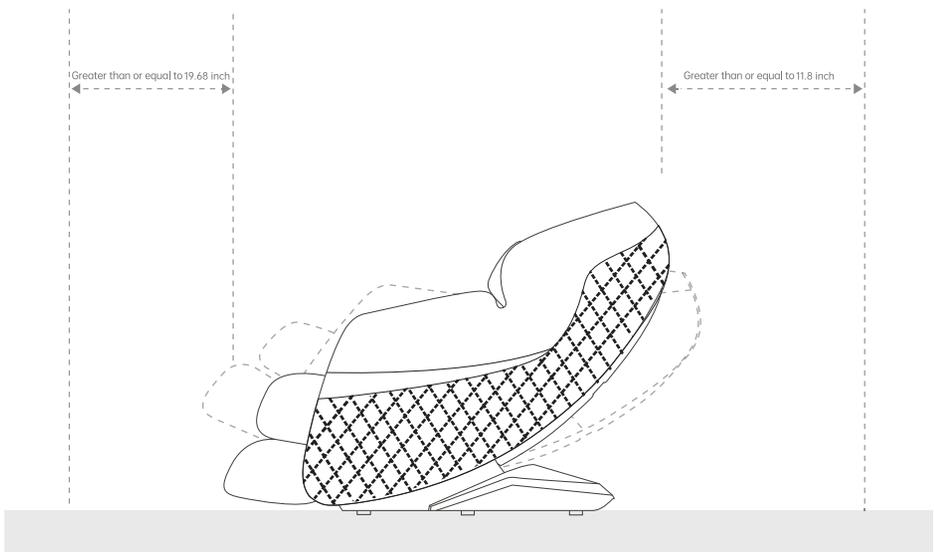

CAUTION

Before using, please tidy up well the cables to avoid twining or damage. When the whole chair makes slide movement forward or backward to original position, please check first whether there are kids, pets or any other objects to avoid accidents. Please put carpet or other pad under the massage chair in order to avoid any unpredictable impression on the floor.

SURROUNDING ENVIRONMENT



Keep the massage chair away from damp places (for example: bathroom) to avoid electric leakage



Keep the massage chair away from high temperatures sources (for example: stove) to avoid fire or damage to leather material

4.2 GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Danger - Improper connection of the equipment-grounding conductor can result in a risk of electric shock.

Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet; have a proper outlet installed by a qualified electrician.

4.3 AFTER USING THE CHAIR

- Please power off the chair and unplug from power the supply socket after using, disconnect the controller and store carefully.
- Please power off the chair and unplug from the power supply socket when the chair is not in use, to avoid children to start the chair accidentally
- Please store well the chair well it is not in use for a long time.

4.4 METHODS OF STORAGE

- Do not dismount the back of the chair
- Keep the massage chair free of dust
- Cover the chair with a dust-free cloth to prevent dust from collecting
- Do not store in a hot, humid, damp place or in direct sunlight or heat
- Do not store in an overly cold place

4.5 MAINTENANCE

- Unplug from electrical source to avoid shock before cleaning.
- Clean the cloth surface with neutral detergent or a special mild detergent for cloth.
- Dust can be cleaned off with a damp cloth or mild detergent and air dry.
- Do not spray pesticide on the device.
- Specified cleaner can be used on the leather, plastic, and dried with a cloth
- Do not use a damp cloth on the electronic components which can cause shock and damage
- The leather covers (headrest, seat cushion, foot cushion) can be removed for cleaning

5.TROURLE SHOOTING GUIDE

5.1 KIND REMINDING

During daily use, please check the possibility of the following risks:

- 1) Scorched smell.
- 2) When you touch the wire, the power sometimes on, sometimes off, the power supply cord is hot or other abnormal phenomenon.



If problems happen as above, please turn off power supply and contact us directly.

5.2 TROUBLE AND SOLUTION

NO.	Problems/Issues	Possible Cause	Troubleshooting Method
1	Sounds like tapping or hum sounds	Sounds from air pump, motor or other mechanical parts	Normal situation
2	Suddenly stops working	1.Bad power connection 2.Auto program timers are up	1.Unplug and reinsert the power cord to the chair 2-Normal
3	Does not work after power on	1.Power switch is not turned on 2.Bad connection between plug and socket 3.Massage remote is not turned on 4.Have broken power wire plug 5.Broken fuse Control unit for functioning properly	1.Turn power switch on 2.Connect power cord again 3.Press power button on remote 4.Contact our customer service or professional technician 5.Replace fuse Contact our customer service or professional technician
4	Roller height changes	Rollers work alternately	Normal phenomenon
5	Abnormal sounds suddenly while working	Maybe caused by massage chair's over working	1.Cut down usage 2.Contact our customer service or professional technician
6	Not able to recline	Obstruction-be sure that the chair is allowed enough room to fully recline	Power off , and move obstruction
7	Not able to restore position after reclined	Problem on electric motion pole or plug under bad connection	Contact our customer service or professional technician

ATTENTION

If problems are not from above reasons, please turn off power supply and contact us directly.

Note : Do not dismantle the produce by yourself, and our company shall shoulder no responsibility to the damage of the product or the inquiry of people caused by improper use. Thanks for your cooperation !

5.3 TECHNICAL SPECIFICATIONS

Name: Massage Chair

Rated Voltage: 110-220V

Rated Frequency: 50-60Hz

Rated Power: 100W

Safety Design: Class I

Manufacturer Reserves The Right To Make Changes To Information's Published In This Document, Including Without Limitation Specifications And Product Descriptions, At Any Time and Without Notice.